



1 PREPARE 2 TREAT 3 MAINTAIN

ADVANCED 2K LACQUER



Extreme resistance

Robust surface with extremely high resistance to black heel marks, scratches, spills and stains. Use hardener for increased strength. Ideal for public areas, canteens etc.



Fast drying

Dry in 6 hours for light use / fully hardened in 5 days and ready for cleaning with water.



Indoor climate labelled

Ensures a good working environment during application. Isocyanate free.



Easy to maintain

No special tool required. Just use the standard WOCA system.

APPLICATION AREA

Advanced 2K Lacquer is for new, untreated, sanded and lacquered wood, or as top coat on WOCA oil. Ideal for all species of wood.

The lacquer is particularly suitable for high-traffic areas, such as public areas, stairs and canteens, due to high durability and easy maintenance.

RESULT

Advanced 2K Lacquer ensures an extremely robust surface with extra high resistance to black heel marks, scratches, spills and stains.

The lacquer is indoor climate labelled and thus assures a good working environment during application, as well as a comfortable indoor climate afterwards.

Product information

Coverage: 8-10 m²/L
Packaging: 5 L
Available in Matt and Silk-matt





HOW TO...

...DO THE BASIC TREATMENT OF WOODEN FLOORS

Tools

The lacquer is preferably applied with a lacquer roller (11 mm luv) or similar.

Preparation

The floor must be free of dirt, grease, wax and sanding residue. Floors that have been previously lacquered must be cleaned with WOCA Intensive Wood Cleaner before being sanded matt. Vacuum thoroughly and wipe the floor down afterwards if necessary, using a tightly-wrung water-soaked cloth.


It is important that both wood and lacquer have a temperature of min. 15 °C (preferably around 20 °C) and air humidity of approx. 50 %. Make sure that the room is well-ventilated for optimal evaporation and drying time.

Please note

Do not expose the floor to water or clean it for the first 5 days while the lacquer is hardening.

Maintenance and cleaning

For regular cleaning, we recommend using WOCA Vinyl Laminate and Lacquer Soap. Maintain the surface with WOCA Vinyl Laminate and Lacquer Care.

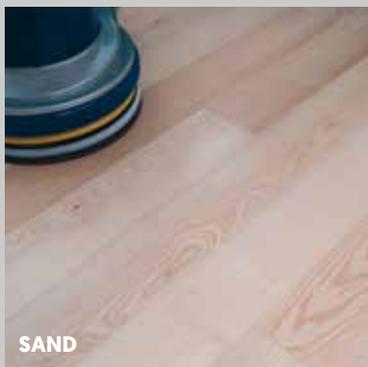

INSTRUCTIONS

- UNTREATED OR SANDED SURFACES

- 1 Final sanding must be done with grit 120. Vacuum carefully and wipe surface with a cloth hard wrung in clean water. The surface must be completely dry before proceeding.
- 2 Apply WOCA Base Primer with a roller or brush and leave the surface to dry.
- 3 Apply a coat of Advanced 2K Lacquer without hardener and leave the surface to dry until next day.
- 4 Sand the surface with grit 150-200 and vacuum carefully.
- 5 Mix WOCA 2K Hardener with the lacquer and shake thoroughly. Leave the mixture for ten minutes before use.
- 6 Apply the final coat of Advanced 2K Lacquer.

- RELACQUERING LACQUERED SURFACES

- 1 Wash the surface with WOCA Intensive Wood Cleaner.
- 2 Sand the wood with grit 120-150 and vacuum carefully.
- 3 Mix WOCA 2K Hardener with the lacquer and shake thoroughly. Leave the mixture for ten minutes before use.
- 4 Apply to coats of lacquer. Allow a drying time of 2-4 hours between the coats.

The newly-lacquered floor can be used with caution the following day.