



1 PREPARE 2 TREAT 3 MAINTAIN

MASTER BASE PRIMER, NORDIC WHITE

PRODUCT DESCRIPTION

Master Base Primer, Nordic White is a water-based wood primer that is ideal for areas where a light look is required. The primer seals the wood and minimises the tannic acid penetration and side-bonding. It is suitable for untreated and sanded surfaces of light woods. Master Base Primer, Nordic White works as a

powerful basic lacquer before treatment with other water-based WOCA floor lacquers.

APPLICATION AREA

Lacquering new, untreated and sanded fir, oak, ash and beech.



120 min

Quick-drying

Sandable after approx. 120 min. at 20°C and 30-60% RH.



use

Economical in use

Very quick, easy and economical to use. Water-based.



side-bondings

Reduces side-bondings

Reduces the risk of side-bondings due to a high flexibility. Minimizes penetration of tannic acid.



Product information

Coverage: 10-12 m²/L

Packaging: 5 L





WORK DESCRIPTION

Preparation

It is important that both wood and product have a temperature of min. 15 °C (preferably around 20 °C) and air humidity of approximately 40-60 %. Make sure that the room is well-ventilated for optimal evaporation and drying time.


Untreated floors must be free of dirt, grease, wax and dust. Floors that have been lacquered previously must be sanded down to clean wood before the primer is applied. Vacuum thoroughly and wipe the floor down afterwards if necessary, using a tightly-wrung water-soaked cloth. Shake the Master Base Primer thoroughly before use.

Note

It is extremely difficult to apply Master Base Primer, Nordic White to diagonally-aligned wood (herringbone parquet etc.) without visible overlap, so we advise extra caution. Absorption of tannic acid is not considered as a valid cause for complaint.

Note

If drying times are not followed, this can result in poor adhesion and reduced resistance. For each layer of Master Base Primer, drying times will be increased. High temperature and low air humidity will reduce drying times. Low temperature and high air humidity will extend drying times.

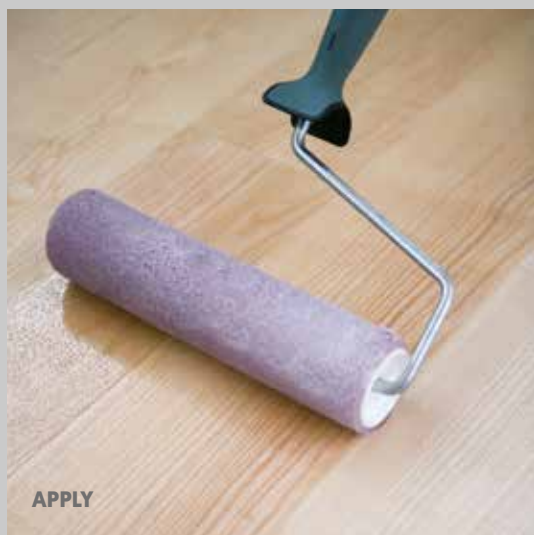

TREATMENT

- 1 Untreated or sanded surfaces:**
Final sanding must be done with fine sandpaper [grit 120]. Vacuum carefully and wipe surface with a cloth hard wrung in clean water and let the surface dry. Apply Master Base Primer, Nordic White undiluted with brush or roller and allow the surface to dry. **Please note:** For a brighter appearance, apply 2-3 coats of Master Base Primer, Nordic White. Sanding must be done after the second coat using grit 120-200 sandpaper [a treatment with a white-pigmented material generally requires more even sanding to prevent the pigments from sticking in the sanding grooves]. Vacuum carefully and apply 1-2 coats with one of the WOCA floor lacquers. Always apply a minimum of three coats [primer and lacquer] for ideal protection.
- 2 Relacquering already lacquered surfaces:**
Master Base Primer, Nordic White is only suitable for priming untreated or sanded wood surfaces.