



1 PREPARE 2 TREAT 3 MAINTAIN

# SUPERIOR LACQUER



resistance

## High resistance

Robust surface with high resistance to scratches, spills and stains. Ideal for kitchens, corridors etc.



24h

## Fast drying

2-3 hours of drying time between coats. Dry in 24 hours for light use / fully hardened in 7 days and ready for cleaning with water.



eco

## Indoor climate labelled

Ensures a good working environment during application.



maintain

## Easy to maintain

No special tool required. Just use the standard WOCA system.

## APPLICATION AREA

Superior Lacquer is for new, untreated, sanded and lacquered wood, or as topcoat on WOCA oil. Ideal for all species of wood.

The lacquer is perfect for medium traffic areas, fx kitchens, corridors and entrance halls, due to high durability and easy maintenance.

## RESULT

Superior Lacquer ensures a very hard-wearing and durable surface with high resistance to water and chemicals and excellent adhesion to previously-lacquered surfaces.

The lacquer is indoor climate labelled and thus assures a good working environment during application, as well as a comfortable indoor climate afterwards.

## Product information

Coverage: 8-10 m<sup>2</sup>/L  
Packaging: 5 L  
Available in Matt and Silk-matt





# HOW TO...

## ...DO THE BASIC TREATMENT OF WOODEN FLOORS

### Tools

The lacquer is preferably applied with a lacquer roller (11 mm luv) or similar.

### Preparation

The floor must be free of dirt, grease, wax and sanding residue. Floors that have already been lacquered must be cleaned with WOCA Intensive Wood Cleaner before intermediate sanding. Vacuum clean thoroughly and if required, wipe down the floor with a clean, tightly-wrung cloth. Shake the lacquer thoroughly before use.


It is important that both wood and lacquer are at a temperature of at least 15 °C, and ideally about 20 °C, and that air humidity is approx. 50 %. Make sure that the room is well-ventilated, for optimal evaporation and drying time.

### Please note

Do not expose the floor to water or clean it for the first 7 days while the lacquer is hardening.

### Maintenance

For the cleaning, we recommend using WOCA Vinyl Laminate and Lacquer Soap, and for the maintenance we recommend WOCA Vinyl Laminate and Lacquer Care as required.

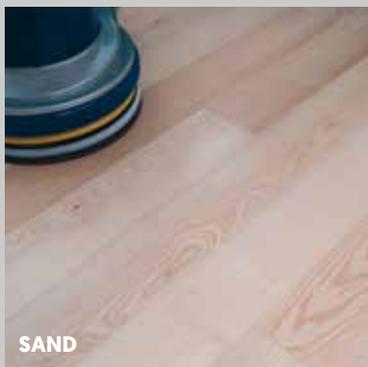

## INSTRUCTIONS

### - UNTREATED OR SANDED SURFACES

- 1 For the final sanding on clean wood, use grain 120 sandpaper or sanding pad.
- 2 Vacuum clean and wash the surface using a well-wrung microfibre mop. The floor must be completely dry before priming.
- 3 WOCA Base Primer and a layer of Superior Lacquer should be applied undiluted, using a brush or roller.
- 4 **Intermediate sanding with grain 150-200** and vacuum clean the surface thoroughly.
- 5 Then apply another layer of undiluted Superior Lacquer.

### - RELACQUERING LACQUERED SURFACES

- 1 Thoroughly clean the surface with WOCA Intensive Wood Cleaner.
- 2 Then sand the surface until matt, using fine sand paper or a grain 120 sanding pad, and carefully vacuum clean the surface before lacquering with Superior.
- 3 Apply two layers of undiluted lacquer, using a brush or roller.

The freshly-lacquered floor is suitable for cautious use after approx. 5 hours. Do not place furniture etc. on the floor until at least 24 hours after the final coat of lacquer. The floor will be ready for normal use after approx. 7 days, after which rugs etc. can be placed on the floor.